



READ THIS NOW

HRS 120 Unpacking Instructions

1. HRS 120 UNPACKING INSTRUCTIONS

NOTE: Before attempting to lift the loudspeakers, remove any rings, watches or other items of jewellery or clothing that may scratch or otherwise damage the finish of the cabinets.

When lifting the loudspeakers out of the packing hold them around the cabinet.

Do not lift them by the DDD driver support pillars (figure 3) as this may damage the driver.

Do not lift them by the cabinet supports (figure 3) as this may damage the cabinet.

Each HRS 120 weighs approximately 30kg (65lbs) and should not be lifted by one person alone. Always have help when lifting an HRS 120.

The HRS 120 is supplied with both loudspeakers packed inside one carton. This must be kept upright as shown in figure 1. Before opening the carton, please inspect it for damage. If you see any damage, please contact the supplying audio dealer immediately and provide them with a full description of the damage. Do not attempt to unpack the loudspeakers until you have spoken with the dealer and have been advised how to proceed.

To unpack the loudspeakers please follow the instructions below:

1. Referring to figure 1, unscrew and remove the four securing screws A from the top cover of the carton B and then lift off the top cover. Do not remove the four screws from the carton lower tray at this point.

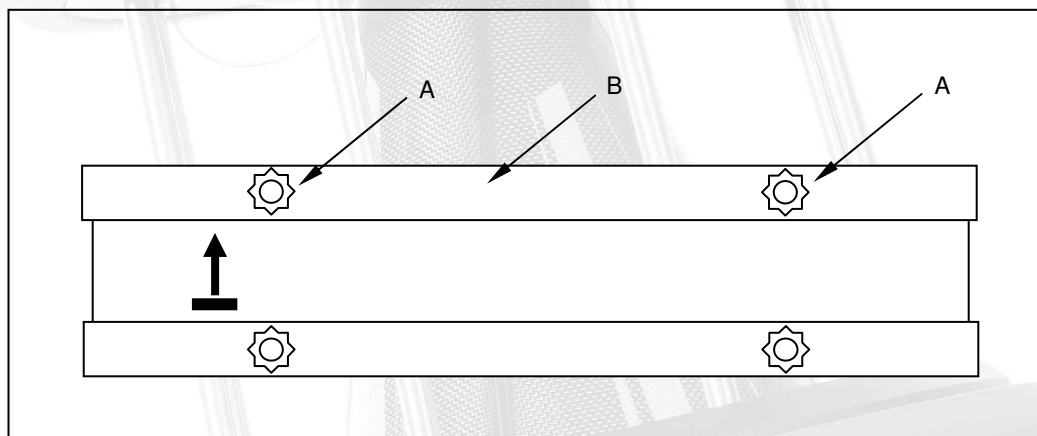


Figure 1. HRS 120 Shipping Carton

2. Remove the two foam packing pieces 'C' in figure 2.

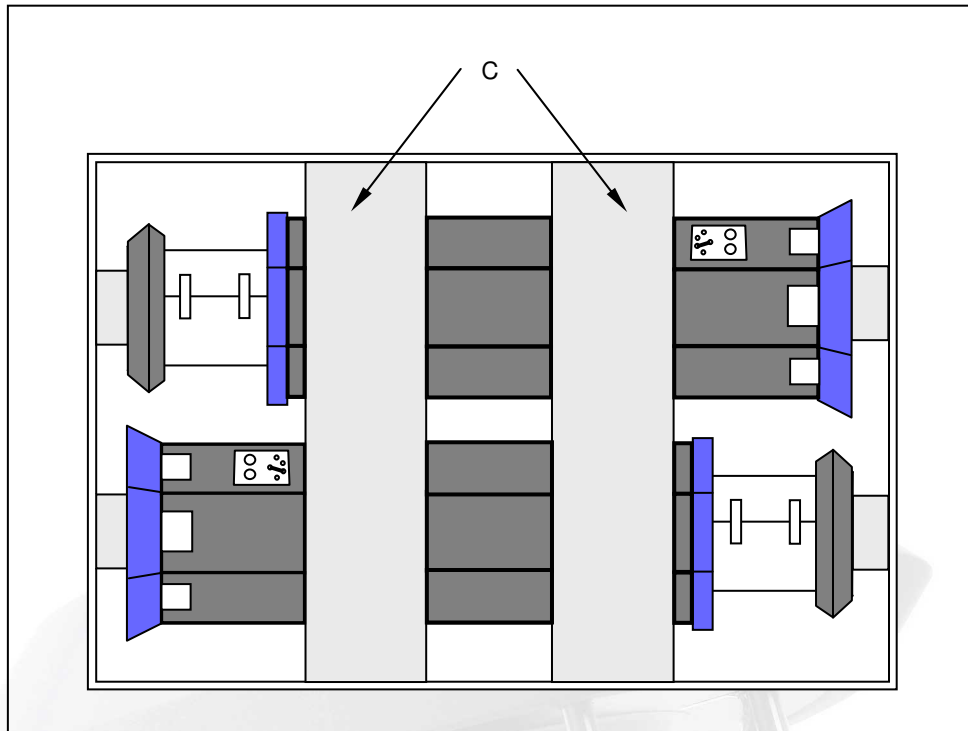


Figure 2. HRS 120 Shipping Carton

3. Lift the loudspeakers off the carton lower tray by holding them around the cabinet. Do not lift them by the DDD driver support pillars or the cabinet supports – figure 3.
4. Remove the two foam protective rings from each loudspeaker.
5. The DDD driver may be fitted with a clear film or cardboard cover. This should be left on for the time being to provide protection while the loudspeaker is being handled.

Please confirm that the carton contains the following items:

| Item | Quantity | Description |
|------|----------|----------------------|
| 1 | 2 | HRS 120 Loudspeakers |
| 2 | 1 | HRS 120 User Manual |
| 3 | 2 | Cleaning Cloths |

If any items are missing or shows signs of damage, please contact the supplying dealer immediately.

Please retain all of the packing as you will need this should it be necessary in the future to ship the loudspeakers. The use of any other packing may result in the loudspeakers sustaining damage in transit. Such damage is not covered by the warranty. Should you require replacement packing, please contact your German Physiks dealer, the national distributor or the factory directly.

2. THE PRINCIPLE FEATURES OF THE HRS 120

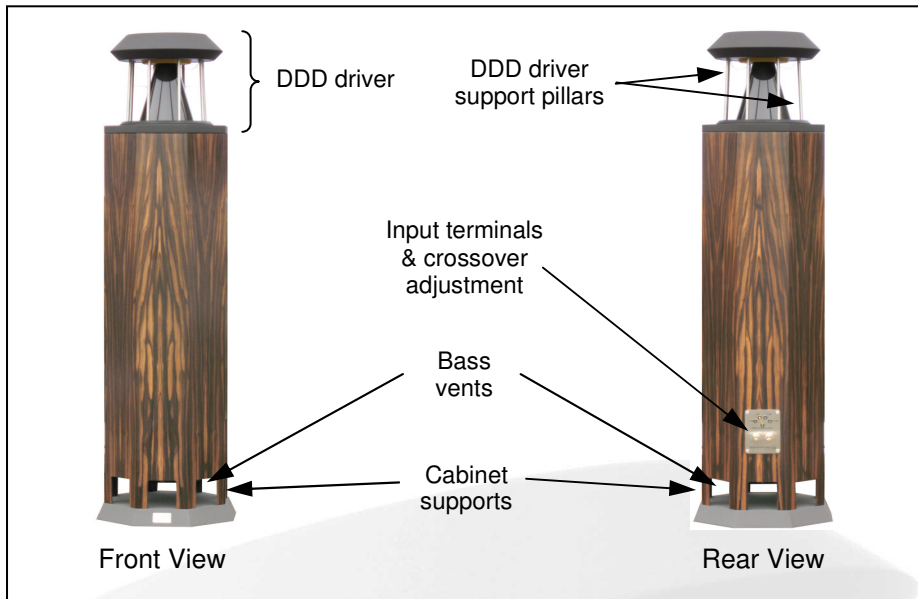


Figure 3. The Principle Features of the HRS 120

3. STORING THE SHIPPING CARTON

Referring to figure 4, the centre section of the shipping carton, B, may be removed and folded flat for more convenient storage by removing the four lower tray securing screws A.

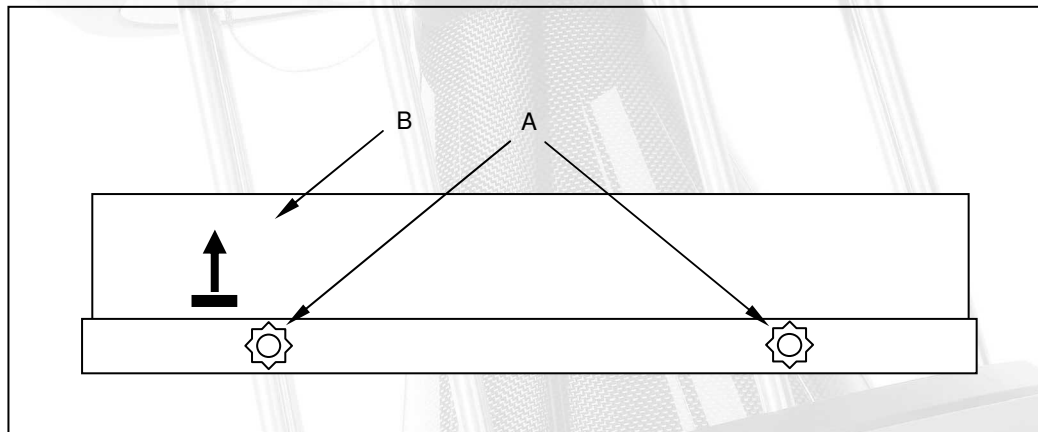


Figure 4. Collapsing the HRS 120 Shipping Carton