



READ THIS NOW

PQS 202 Mk II Unpacking Instructions

1. UNPACKING YOUR LOUDSPEAKERS

NOTE: To allow the packing to be lifted off the loudspeakers, ensure that the room where the loudspeakers are to be unpacked has at least 90cm of clearance between the top of the carton and the ceiling.

When lifting the loudspeakers out of the packing hold them around the cabinet or top plate – figure 2. Do not lift them by the DDD driver support pillars as this may damage the DDD driver.

Each loudspeaker weighs approximately 73kg (160lbs) and should not be lifted by one person alone. Always have help when lifting a loudspeaker.

The DDD drivers may be protected with clear film or cardboard covers. We recommend that these be left in place until the loudspeakers have been placed in their final location, so as to guard against accidental damage during handling.

Each loudspeaker is supplied in an individual shipping carton. This must be kept upright as shown in figure 1. Before opening the carton, please inspect it for damage. If you see any damage, please contact the supplying audio dealer immediately and provide them with a full description of the damage. Do not attempt to unpack the loudspeakers until you have spoken with the dealer and have been advised how to proceed.

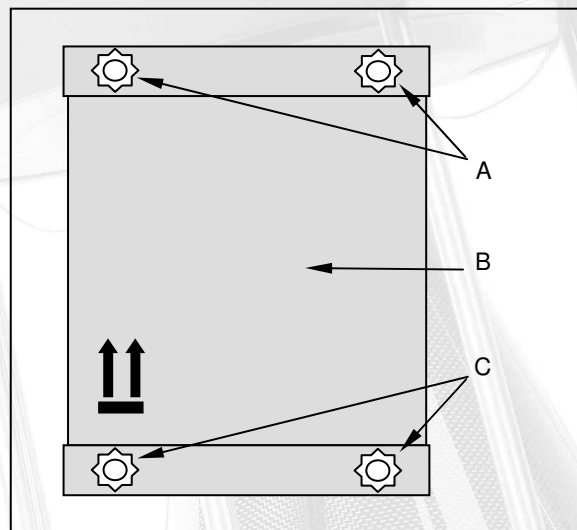


Figure 1. PQS-202 Mk II Shipping Carton

To unpack the loudspeakers please follow the instructions below:

1. Unscrew and remove the two screw caps on each side of the carton top cover – item A in figure 1.
2. Remove the carton top cover by carefully pulling it over the four screws.
3. Remove the foam packing piece from the top of the main body of the carton - item B in figure 1.
4. Unscrew and remove the two screw caps on each side of the carton lower tray – item C in figure 1.

5. Lift off the main body of the carton – item B in figure 1. Make sure that you have sufficient clearance between the top of the carton and the ceiling above. This may be folded flat for easy storage.
6. Lift the loudspeaker off the lower packing tray by holding it around the cabinet or top plate. Do not lift the loudspeaker by the DDD driver support pillars.
7. Remove any clear film from around the loudspeaker taking care not to scratch the finish. Do **not** use a knife.

Please confirm that the cartons contain the following items:

Item	Quantity	Description
1	2	PQS-202 Mk II Loudspeakers
2	1	PQS-202 Mk II User Manual
3	2	Cleaning Cloths

If any items are missing, or show signs of damage, please contact the supplying dealer immediately.

Please retain all of the packing as you will need this should it be necessary in the future to ship the loudspeakers. The use of any other packing may result in the loudspeakers sustaining damage in transit. Such damage is not covered by the warranty. Should you require replacement packing, please contact your German Physiks dealer, the national distributor or the factory directly.

2. PRINCIPLE FEATURES OF THE PQS-202 Mk II



Figure 2. Principle Features of the PQS-202 Mk II